

APPLICATION TIPS

RECOMMENDED SUPPLIES



Before beginning application, be sure to have all chemical protectants and the following supplies available:

- High-pressure washer
- Foamer attachment for the high-pressure washer
- Non-caustic, all-purpose cleaner
- Window cleaner with ammonia and alcohol
- Long-handled squeegee
- Telescopic pole with a dust mop attachment
- Clean microfiber towels
- Safety glasses
- Nitrile gloves (for use with Windshield Protectant)


Please note: All RVs or towable units must be completely clean and dry before application.

RECOMMENDED APPLICATION ENVIRONMENT



- A dedicated, temperature-controlled wash bay.
- If a dedicated bay is not available, a covered area can be used.
- The application cannot be done if the metal is hot. While not ideal, a shaded area with no direct sunlight can be used should a wash bay or covered area not be available.

RECOMMENDED PROCESS

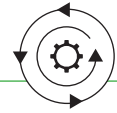

1. Prior to applying any protectants, wash the RV exterior with a non-caustic, all-purpose cleaner.
2. Apply the interior **Carpet & Fabric Protectant** first. Use a fogger, trigger sprayer, garden sprayer or any other system that will produce a fine mist. Spray a fine mist to all carpet and fabric surfaces and allow to dry (average dry time is 30 to 45 minutes).
3. While the interior protectant is drying, apply the **Ceramic Spray-On Exterior Protectant** to the end cap. The end cap must be clean and dry before application.
4. Apply the **Ceramic Spray-On Exterior Protectant** to all vertical panels on the vehicle in no larger than 8'x4' sections. DO NOT over apply the protectant or it could streak. You can apply the Ceramic to a dry vehicle, headlight lenses, wheels and black trim molding. (Pro Tip: use the foamer attachment on the high-pressure washer to apply the chemical to the 8'x4' vertical sections of the vehicle.) Once applied, use a clean microfiber towel or a telescopic pole with a microfiber mop attachment to remove any excess chemical and buff it to a polished shine. Allow 30 minutes to cure.
5. Apply the interior **Leather & Vinyl Protectant** with a clean sponge or applicator pad to all leather and vinyl surfaces and allow it to dry (10 to 15 minutes). Wipe off any excess product with a clean dry microfiber towel. DO NOT apply Leather & Vinyl Protectant to any clear plastic lenses on the instrument panel, floors, steering wheel, shifters or pedals.
6. Before applying the **Windshield Protectant**, clean the windshield thoroughly using a long-handled squeegee and window cleaner that has both ammonia and alcohol in it, such as Windex. Apply the Windshield Protectant in a crosshatch pattern (vertically and horizontally) to the entire windshield. Remove the haze left by the product by wiping it off with a clean, damp microfiber towel, followed immediately by polishing the surface to a high gloss with a clean dry microfiber towel.